

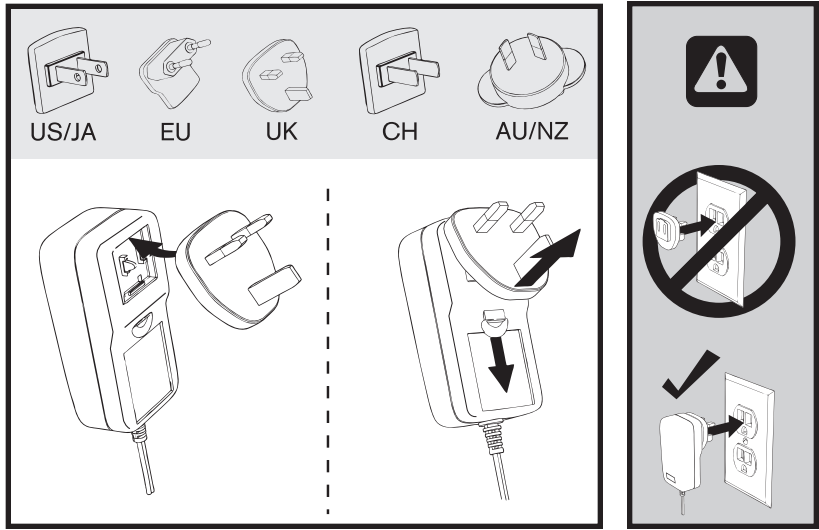
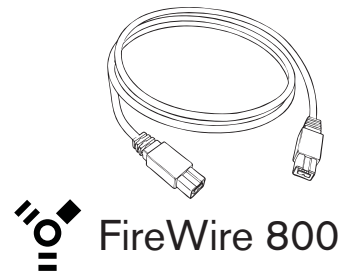
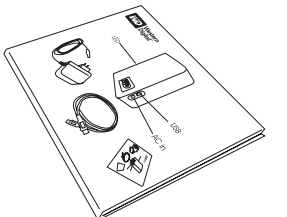
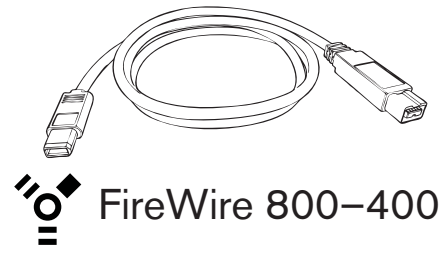
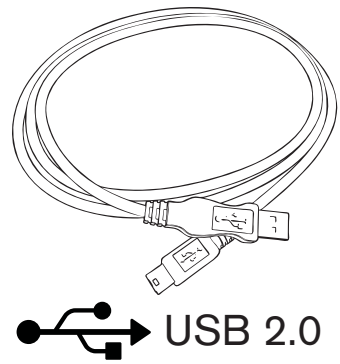


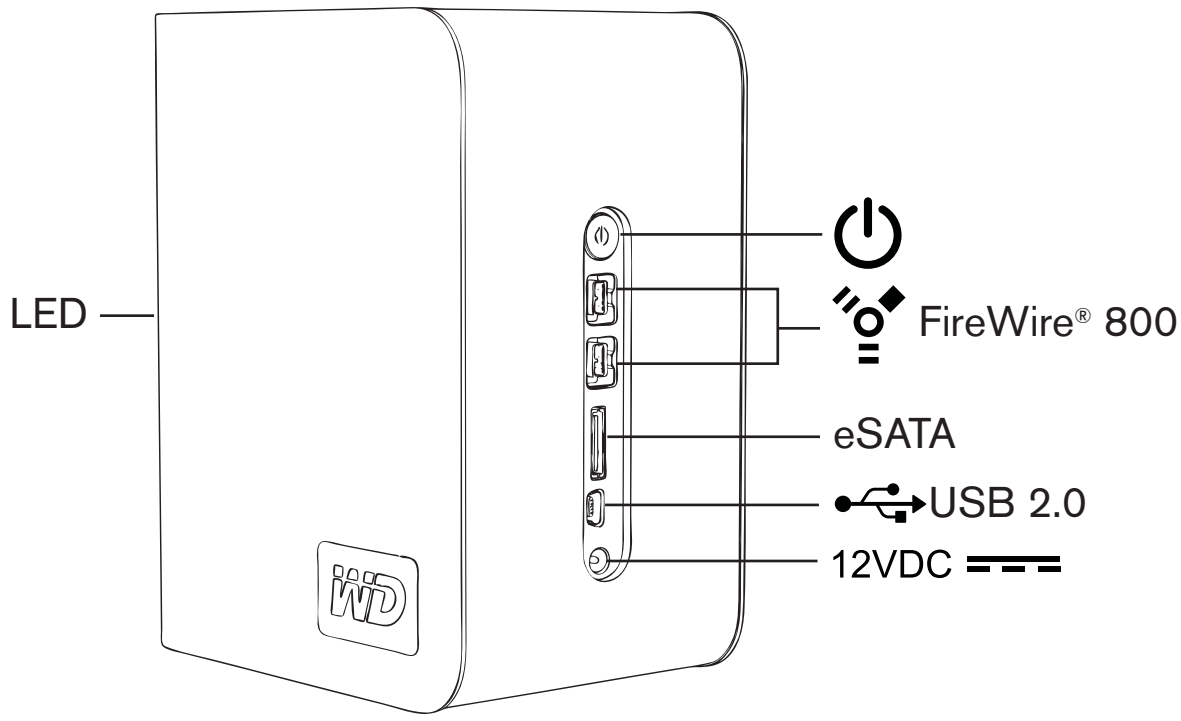


or

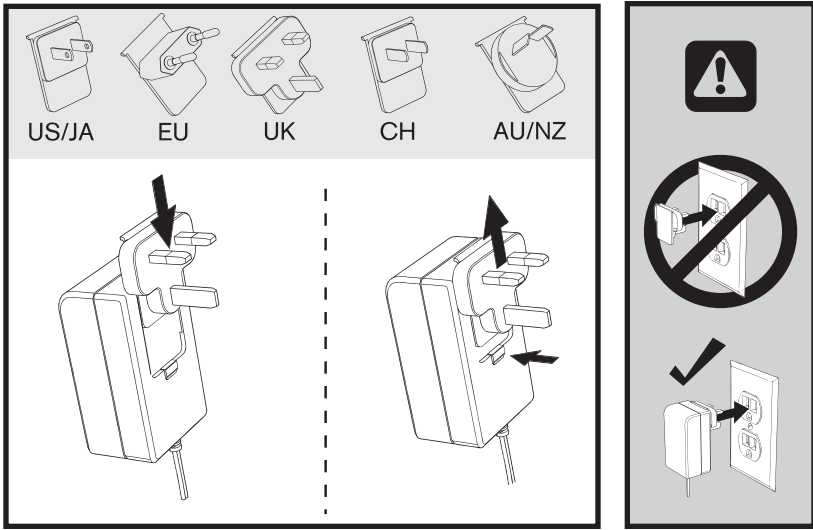

eSATA


1

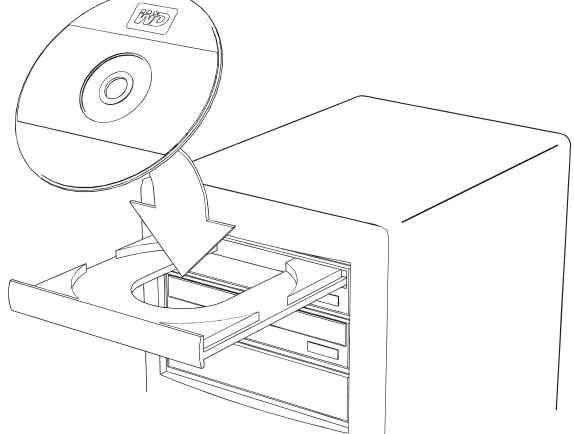


2




3

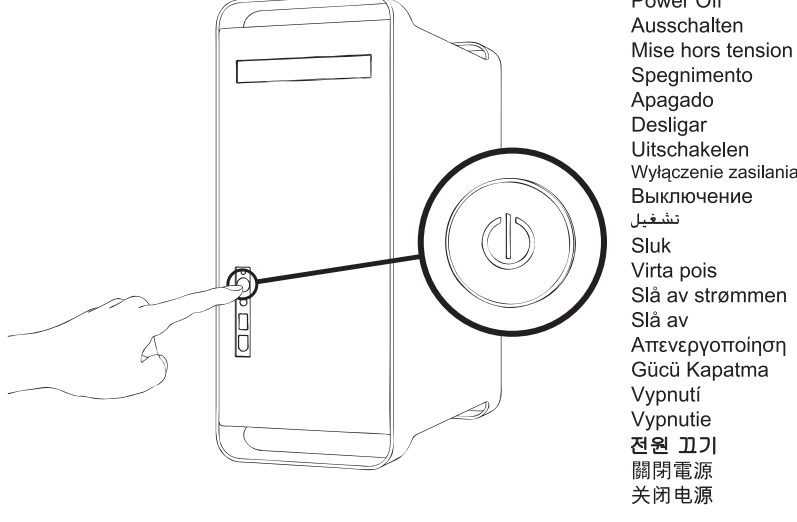

4

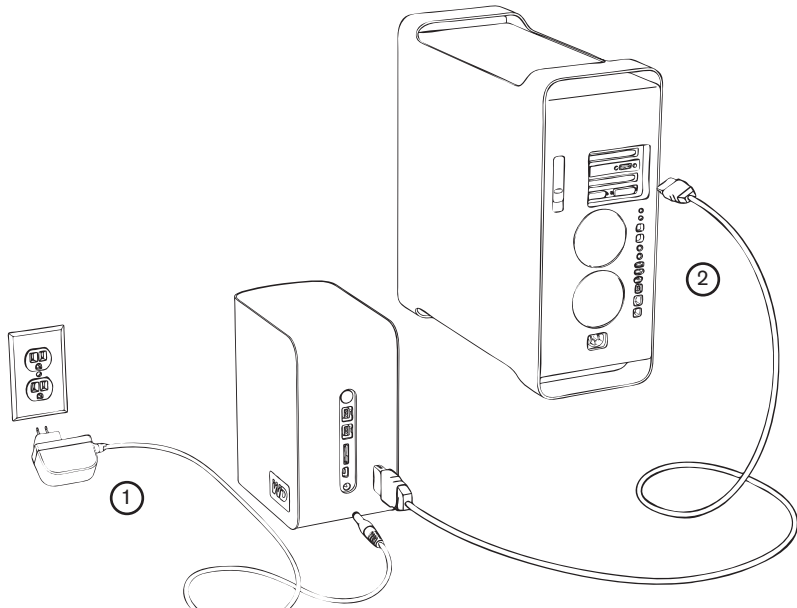

5

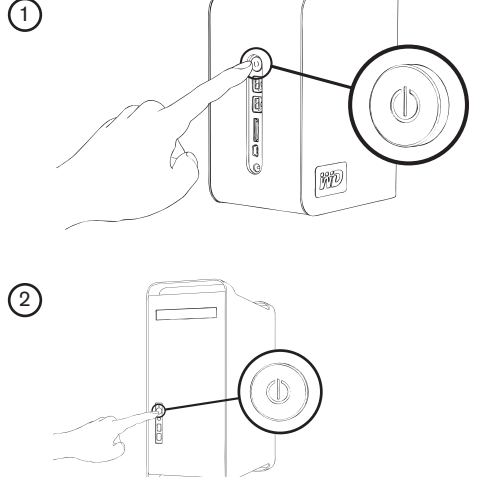


Power Off
Ausschalten
Mise hors tension
Spegnimento
Apagado
Desligar
Uitschakelen
Wyłączenie zasilania
Выключение
تسغیل
Sluk
Virta pois
Slå av strømmen
Slå av
Απενεργοποίηση
Güçü Kapatma
Vypnutí
전원 끄기
關閉電源
关闭电源


Power On
Einschalten
Mise sous tension
Accensione
Encendido
Ligar
Inschakelen
Włączenie zasilania
Включение
إشغال
Tænd
Virta päälle
Slå på strømmen
Slå på
Ενεργοποίηση
Güçü Açma
Zapnutí
전원 켜기
啟動電源
打开电源

USB


1

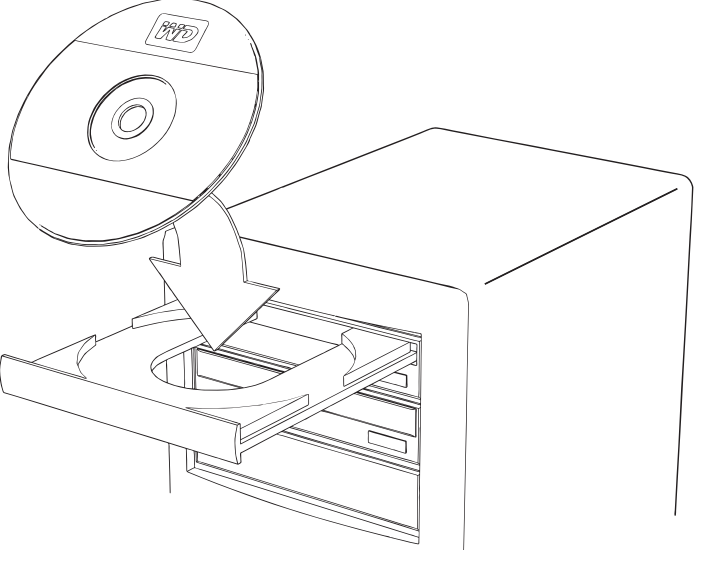

2

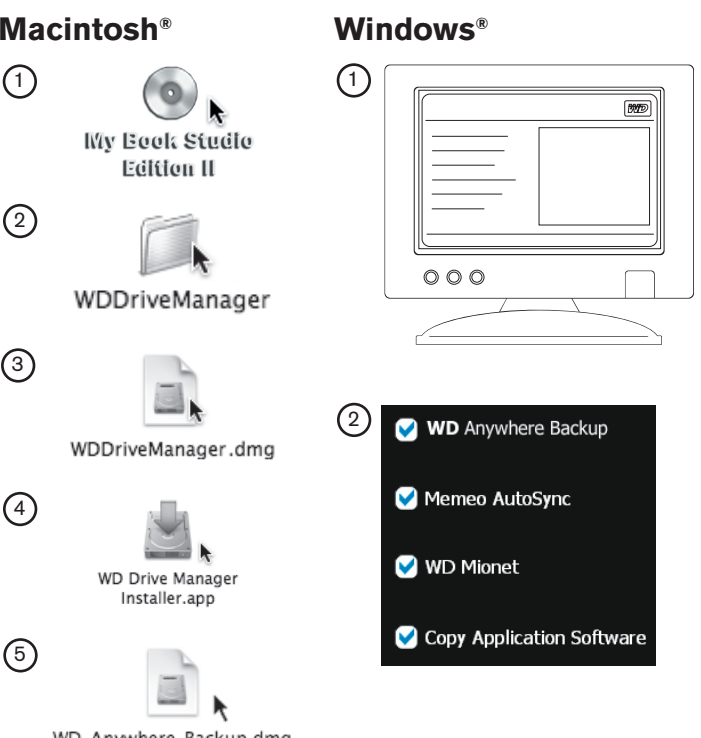


3

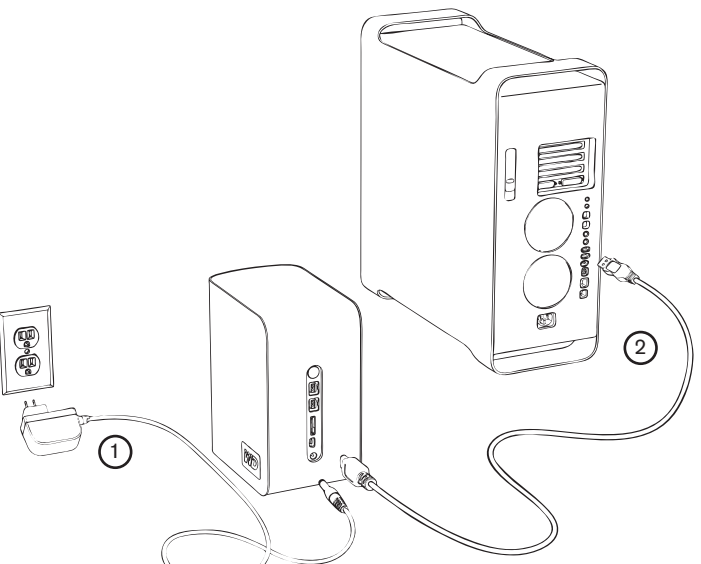


FireWire 800

1

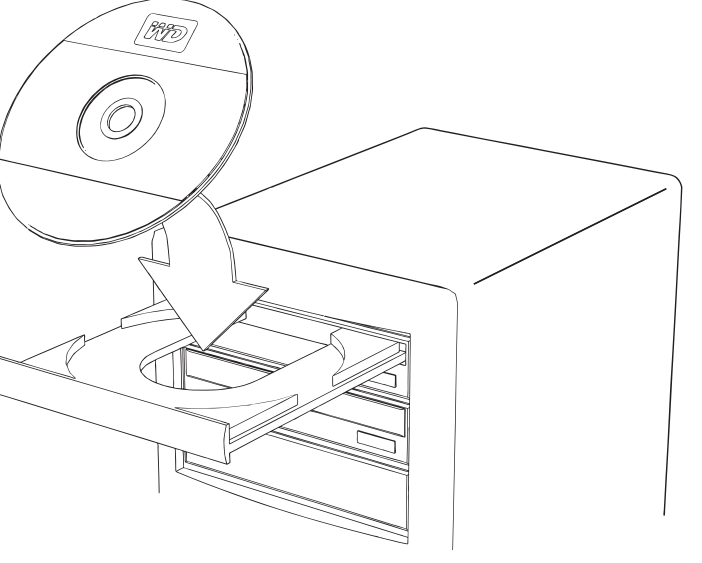

2

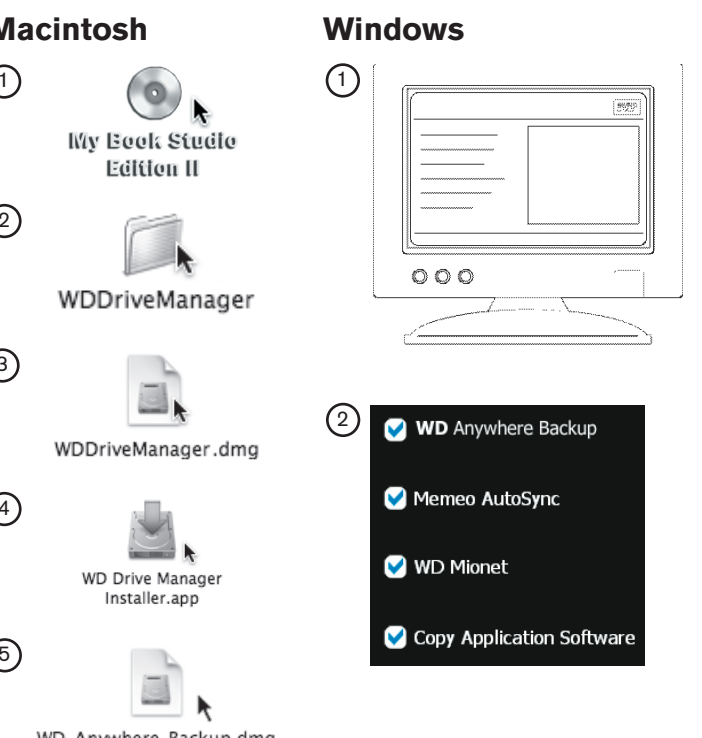

3

